



## Jeep Headlight Bracket Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

Putco is not liable for any damage due to installation

| KIT CONTENTS:           |      |
|-------------------------|------|
| Description             | Qty. |
| Driver Side Light       | 1    |
| Passenger Side Light    | 1    |
| Adaptor Harness         | 2    |
| Headlight Bracket       | 2    |
| #6-32 x 5/16" bolt      | 8    |
| #6-32 Lock Nut          | 8    |
| M6 Thread Forming Screw | 4    |
| M5 x 55mm Screw         | 2    |
| Spring                  | 2    |

### Tools Needed:

- 15mm and 5/16" Wrench
- T15 and T30 Torx
- 3mm Hex Wrench
- Phillips Screw Driver
- Plastic Pry Bar

### Headlight Bracket Installation

1. Remove headlights and headlight brackets from packaging. Check to see if all parts from above table of Kit Contents are included.
2. Remove grille from Jeep by removing 6 plastic fasteners from top of grill, removing marker light harnesses, and pulling straight out on grille.



3. Remove factory light retaining ring by unscrewing (4) T15 Torx screws around perimeter of factory light.




4. Carefully remove factory LED headlamp from Jeep by unclipping plastic outer ring away from 3 mounting pins using a plastic pry bar.



#### LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

# PUTCO

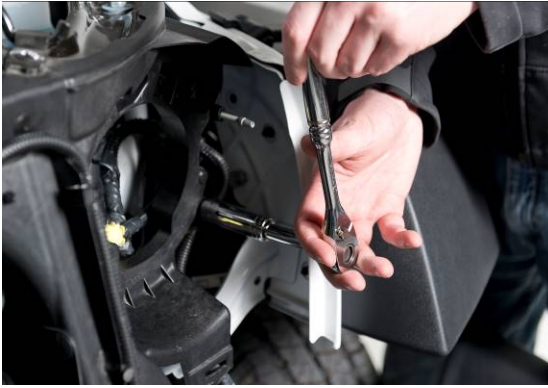

5. Once factory headlamp is removed unscrew the 3 factory mounting pins. The two bottom pins can be removed with a 15mm socket and top can be removed with a T15 Torx bit.

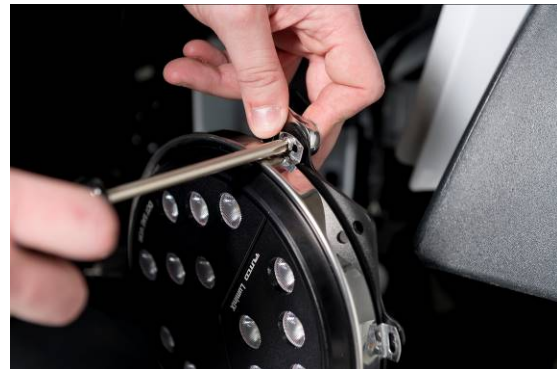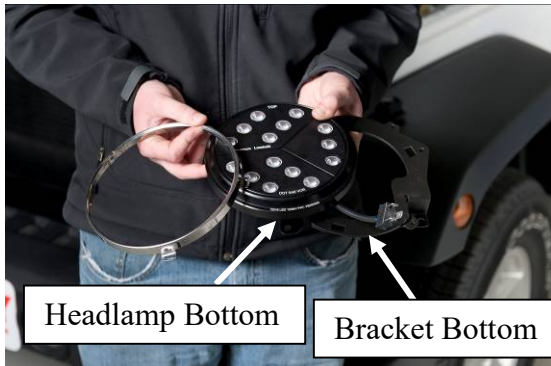

6. Mount Putco headlamp into bracket using factory retaining ring removed in Step 3 and supplied #6 hardware. Use Phillips screwdriver and 5/16" wrench to tighten. Verify that Putco headlamp is installed with the bottom of the headlamp to the bottom of the bracket. Driver side headlamp is shown above and retaining ring will only mount direction. Putco bracket is the same between Driver and Passenger side.



7. Install anti-flicker harness into factory harness and plug Putco headlamp into Putco anti-flicker harness.

## LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

# PUTCO



8. Mount Headlamp assembly into Jeep by first, using two M6 Thread Forming Screws on bottom of bracket. Tighten with T30 Torx. Then, mounting top of bracket using M5 x 55mm Screw and spring. The spring goes between Jeep mounting hole and the Putco bracket. For driver side the screw goes in upper right hole and for passenger side it goes in up left hole On Putco Bracket. Adjust this screw to for headlamp position using 3mm hex wrench. This hardware will thread into factory location where pins were removed in Step 5



9. Repeat steps on Passenger side. Reinstall grill and Enjoy!

## LIMITED 90 DAY WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.