

MOLLE PANELS

- M O D U L A R L I G H T W E I G H T L O A D C A R R Y I N G E Q U I P M E N T -

195XXXT-5I

INSTRUCTION GUIDE



PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

KIT CONTENTS:

Description	Qty.
Molle Tailgate Panel	1
Molle Backing Plate	1
Lower Mounting Bracket	2
M6 Socket Head Bolt	4
M6 Washer	4
10-32 X 1" Button Head Bolt	4
#10 Washer	4
10-32 Well Nut	4
3/8 X 2.5" Socket Head Bolt	3
3/8 Washer	3
3/8 Well Nut	3


Tools Needed:

- 5mm Hex Key
- 1/8 Hex Key
- 5/16 Hex Key



Installation Instructions:

- 1** Remove the access panel on the tailgate.
- 2** Insert the 10-32 well nuts into the slots in the lower tailgate as shown in Figure 1.

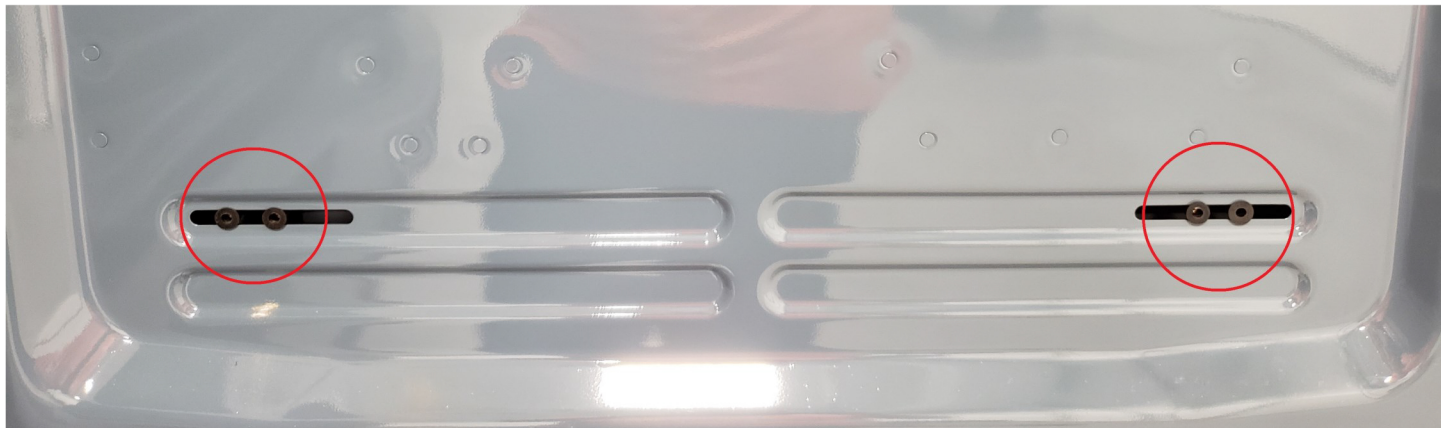

- 3** Attach the two lower brackets using the 10-32 bolts and the lower well nuts as shown in Figure 2.



- 4** Loosely attach the backing plate to the molle panel with the 3/8 bolts, washers, and spacers as shown in Figure 3.






Installation Instructions:

- 5** Align and insert the 3/8 well nuts into the tailgate holes shown in figure 4



- 6** Attach the molle plate to the lower mounting brackets using the M6 bolts.

- 7** With the molle plate in place on the tailgate, go back and make sure the bolts are tight. All the bolts should be snug, but do not overtighten. The installed molle plate should look like the one in Figure 5.

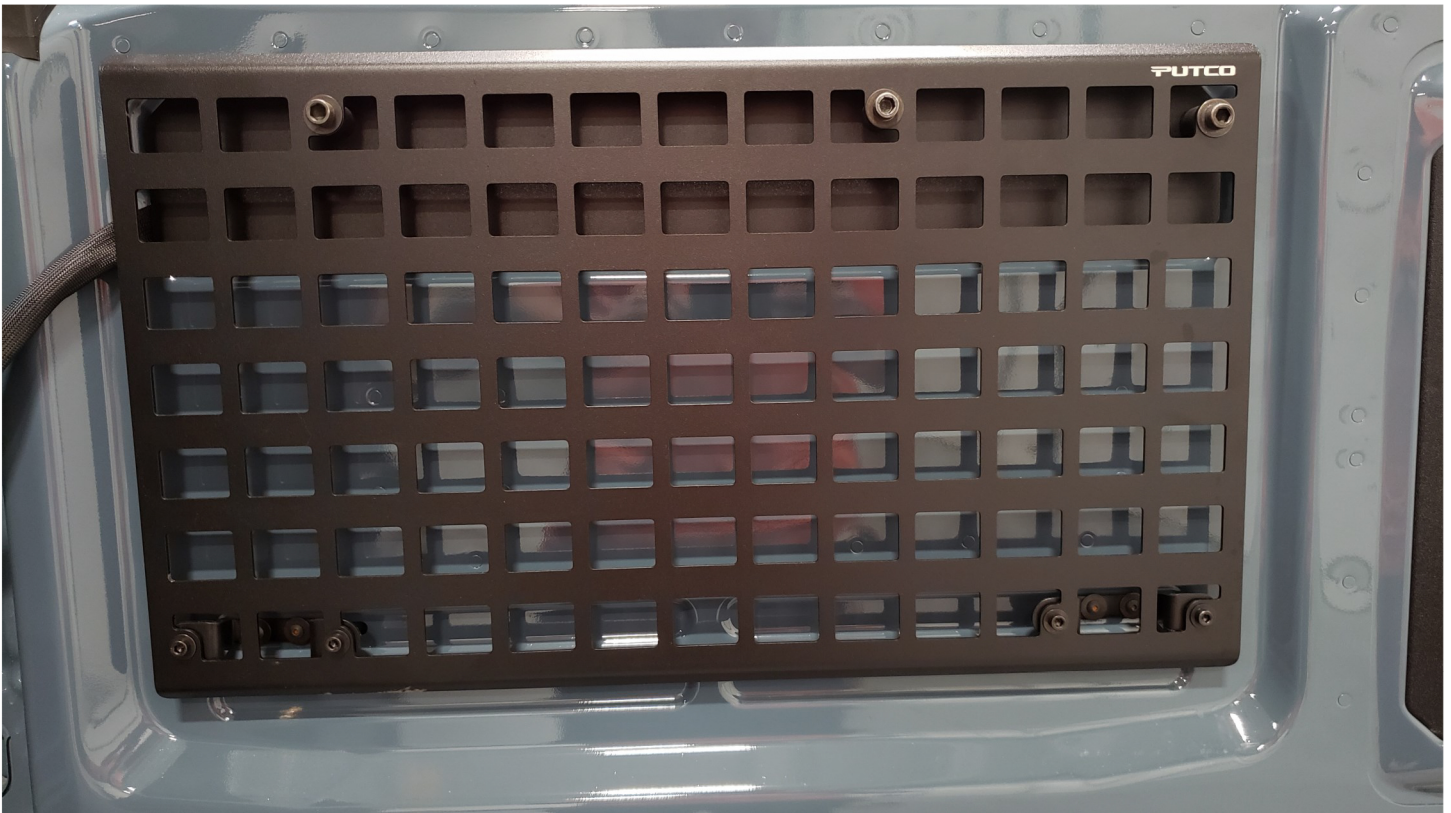

***Your new MOLLE Panel is now successfully
installed on your vehicle!***