

2015+ Ford F-150/2017+ Ford Super Duty

Luminix Hood Light Brackets

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

KIT CONTENTS:	
Description	Qty.
Driver Side Bracket	1
Passenger Side Bracket	1

Tools Needed:

- 10mm socket/wrench

Installation Instructions:

The brackets are designed to utilize the factory mounting locations for the front fender. These locations are shown in **Figure 1**.



Figure 1: Bracket Locations

Installation Instructions Cont.

1. Begin by pulling upwards on the windshield shroud at the corner to reveal the top bolt for the front fender. It is not necessary but it may be helpful to have a second individual hold the shroud out of the way while loosening and tightening the bolt. **Figure 2.**
2. Using a 10mm socket, loosen and remove the 10mm fender bolt.
3. Insert the bolt into the bracket and tighten the fender bolt. The proper orientation is to have the curved portion facing the outside of the truck and the tab extension pointing to the rear of the truck. This can be seen in **Figure 3.**
4. Route the wire down through the fender away from any potential pinching or moving parts. **Figure 4.**
5. Repeat steps 1-4 on the other side of the vehicle.
6. Mount light in top hole of bracket (this kit is designed for Putco 10004 or 10007 LED Block Lamps). **Figure 5.**
7. Refer to instructions included with lights for wiring instructions.



Figure 2: Fender Bolt Location



Figure 3: Bracket Orientation

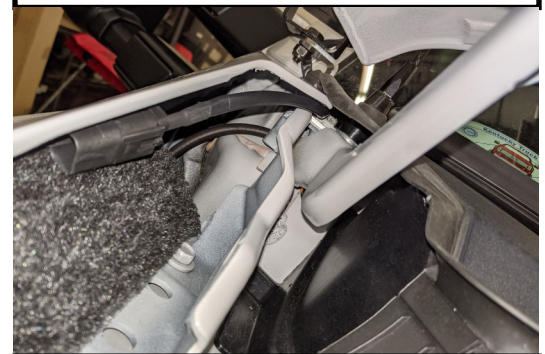


Figure 4: Wire Routing



Figure 5: Putco 10007 Installed