



INSTRUCTION GUIDE

Blade Quick Connect Harness Installation Instructions



1-800-247-3974

Monday-Friday 8:00am - 5:00pm (Central Standard Time)
 Contact your PUTCO® dealer for other quality accessories.



PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED

REQUIRED TOOLS



Clean Cloth



Zip-Ties



Isopropyl Alcohol


CONTENT LIST:

DESCRIPTION	QTY
LED Light Bar	1
Quick Connect Harness	1
Black Plastic Bracket	4
3M Tape Strips	4
Promotor Packet	1



INSTALLATION INSTRUCTIONS:

- 1** Unplug the factory 7 pin trailer connector from the truck, then plug it into the Blade Quick Connect Harness. Plug the other end of the Quick Connect Harness into the 7 pin plug on the bumper. Refer to Figure 1.

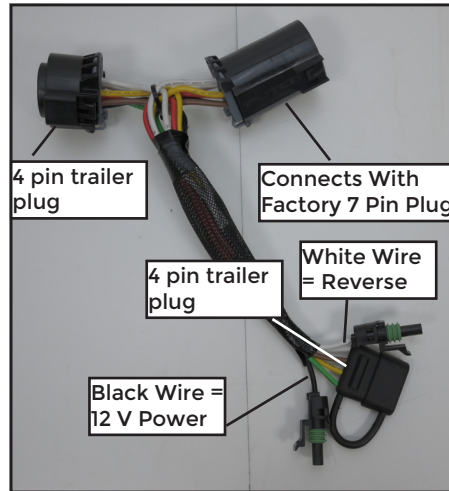

- 2** Weatherpack connectors connect via the white (reverse) wire of the Blade Quick Connect Harness to the Blade Tailgate Lightbar's white (reverse) wire.
- 3** Connect the 4 Pin Trailer Plug to the Blade Tailgate Lightbar or other accessory.
- 4** If the reverse or power wire on the Blade Quick Connect Harness are not being used in your application, be sure to insulate the ends with heat shrink or electrical tape to prevent a short.

**Your Putco Blade Led Lightbar is now installed!
Enjoy your new Putco product!**

