



529006 SUPER DUTY INSTRUCTIONS 2017-2019 SUPER DUTY

2017-2019 ONLY

For use w/ 92019 and 92020 series Blades

Requires removal of support bracket on some trucks if 60" Blade is to be used



Congratulations on your purchase of a high quality PUTCO® product. Should you need any application or technical assistance, feel free to call us at:

1-800-247-3974

Monday-Friday 8:00am - 5:00pm (Central Standard Time)
Contact your PUTCO® dealer for other quality accessories.



**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION
AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED**

REQUIRED TOOLS

T27 AND T40 TORX BITS



ISOPROPYL ALCOHOL



FLATHEAD SCREWDRIVER



ZIP-TIES



CONTENT LIST

QTY

Blade Harness

1



- 1** The factory wire harness is located along the passenger's side frame rail, near the spare tire. (Figure 1)
- 2** Depress tab and unplug factory harness. (Figure 2).
- 3** Plug the Blade Harness into factory wiring. Ensure plugs audibly "click" into place. (Figure 3).



Figure 1: Location of factory wire harness.

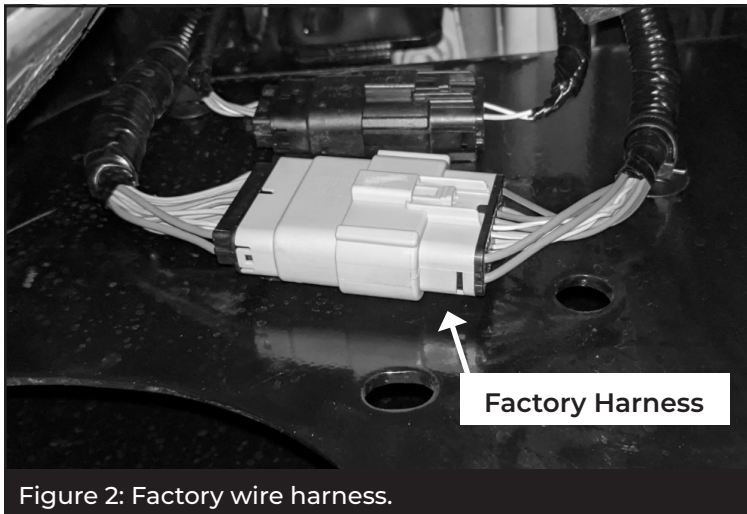


Figure 2: Factory wire harness.



Figure 3: Blade harness plugged into factory harness.

- 4** Disconnect rear view camera plug(s) on driver's side frame rail. (Figure 4 left) Remove tail gate and clean mounting surface w/isopropyl alcohol. With the Torx T27 driver, remove trim piece. (Figure 4 right)

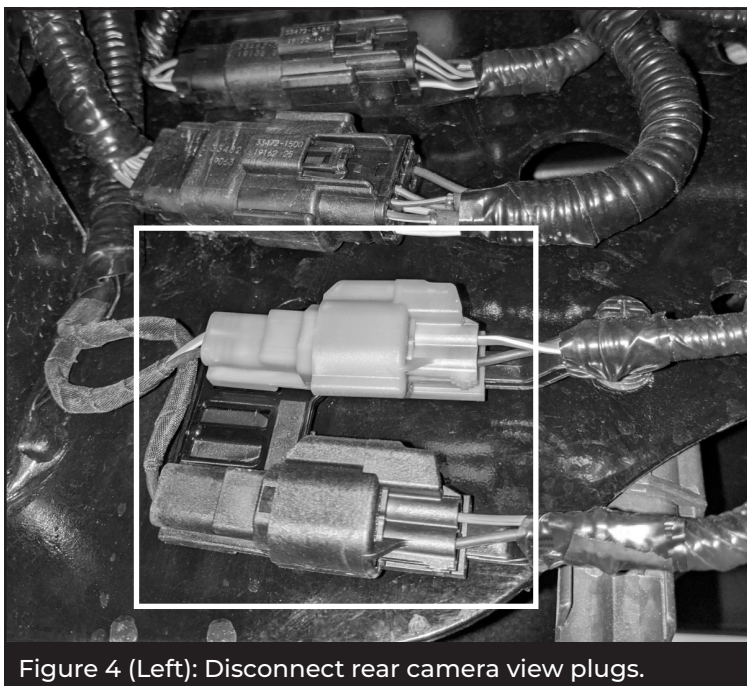


Figure 4 (Left): Disconnect rear camera view plugs.

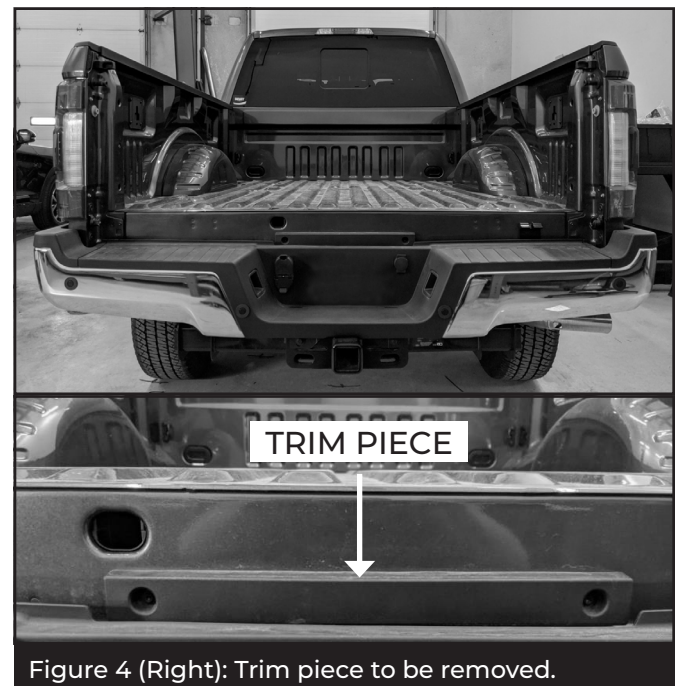


Figure 4 (Right): Trim piece to be removed.



- 4** If installing 60" Blade, remove support bracket w/Torx T40 socket and wrench. (Figure 5)

Install black plastic brackets with tape onto the back of tailgate light bar. One on each end, then evenly space out. Remove tape release liner on all brackets. Place light bar in chosen position on the bed of truck. Do not stick tape to truck until light bar is in correct position. **Light bar wire should exit toward driver side of truck.**


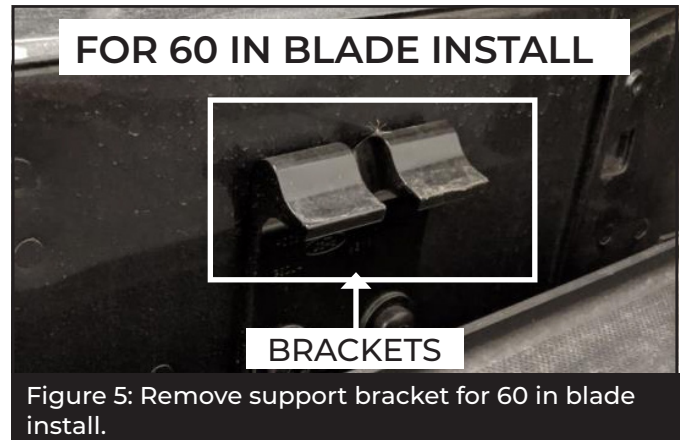


Figure 5: Remove support bracket for 60 in blade install.



- 5** Route the wires behind the bumper. Connect 4 pin connector and Weather Pack connector to Blade Harness *Note: Putco recommends using di-electric grease on 4 pin connector to help keep connection water resistant. Zip-tie wires and Blade driver box in safe location, away from debris, hot exhaust pipes, or pinch points.

- 6** Test that the Blade functions work properly (brake, turn signals, reverse, and running lights). Reassemble tail gate and do not forget to plug in rear view camera.

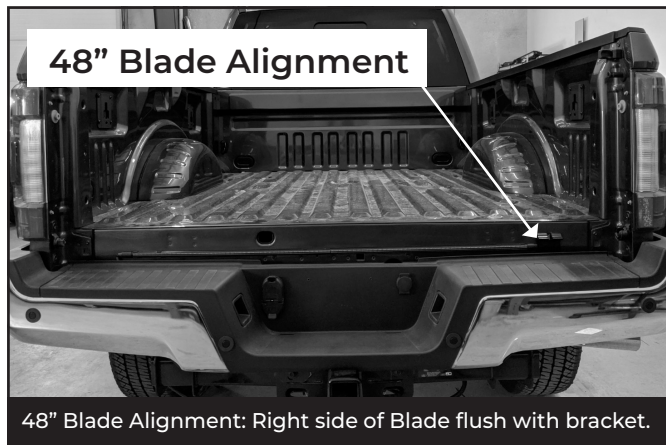

ENJOY YOUR NEW BLADE TAILGATE LIGHT BAR