




529006 SUPER DUTY INSTRUCTIONS 2020 + SUPER DUTY

2020+ ONLY
For use w/ 92019 and 92020 series Blades

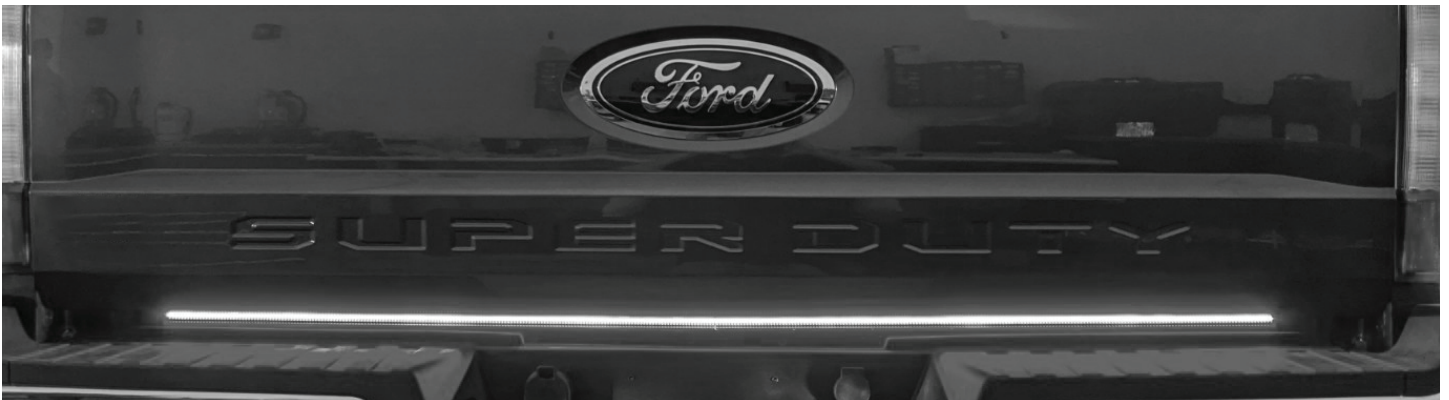

Congratulations on your purchase of a high quality PUTCO® product. Should you need any application or technical assistance, feel free to call us at:

1-800-247-3974

Monday-Friday 8:00am - 5:00pm (Central Standard Time)
Contact your PUTCO® dealer for other quality accessories.



**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION
AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED**

REQUIRED TOOLS

FLATHEAD SCREWDRIVER



ISOPROPYL ALCOHOL



ZIP-TIES



CONTENT LIST

QTY

Blade Harness	1
Brake Harness	1
Blade Led Lightbar	1



- 1** The factory wire harness is located along the passenger's side frame rail, near the spare tire. (Figure 1)
- 2** Depress tab and unplug factory harness. (Figure 2).
- 3** Plug the Blade Harness into factory wiring. Ensure plugs audibly "click" into place. (Figure 3).



Figure 1: Location of factory wire harness.

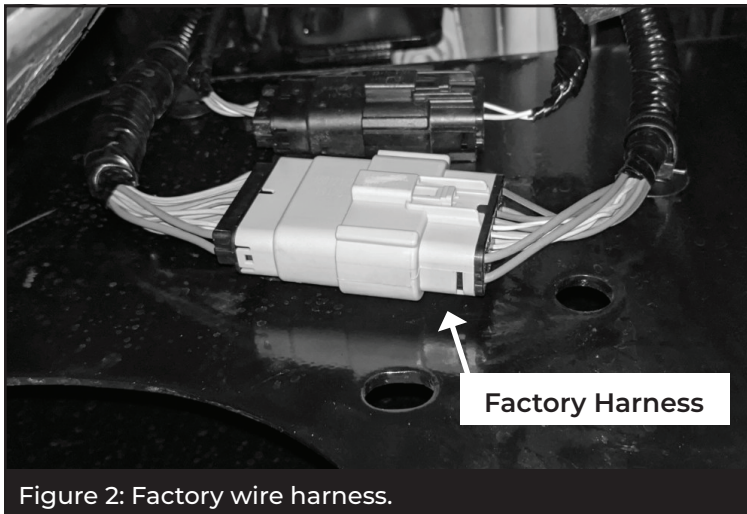


Figure 2: Factory wire harness.

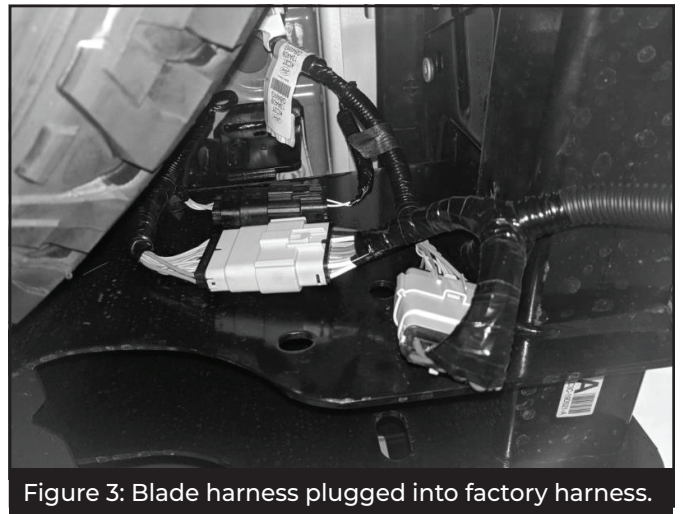


Figure 3: Blade harness plugged into factory harness.

- 4** Unplug the factory harness that is located above where you just plugged in the blade harness and plug in the brake harness to the factory harness.

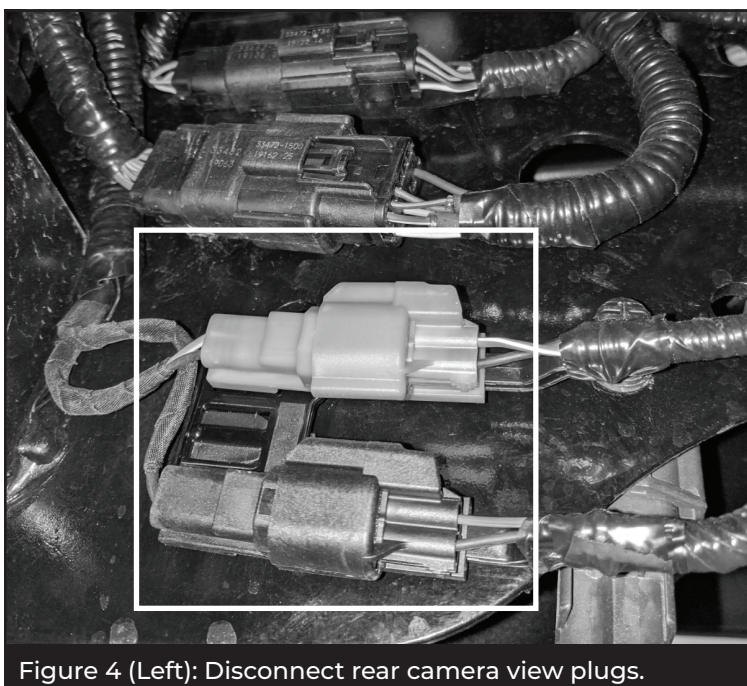


Figure 4 (Left): Disconnect rear camera view plugs.


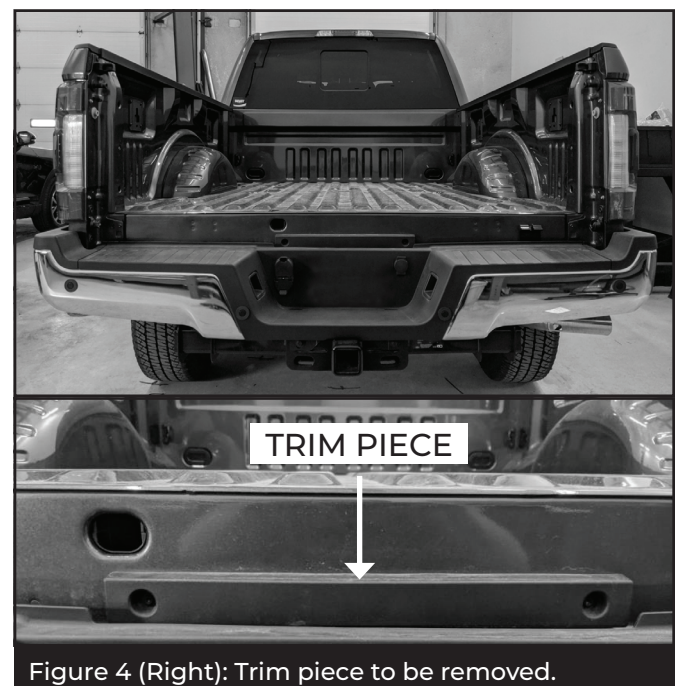


Figure 4 (Right): Trim piece to be removed.



- 5** If installing 60" Blade, use the included spacer along with the plastic mounting brackets to clear the tailgate support bracket found on the passenger's side area (Figure 5). Place the clip and spacer 8" from the end of the light bar.

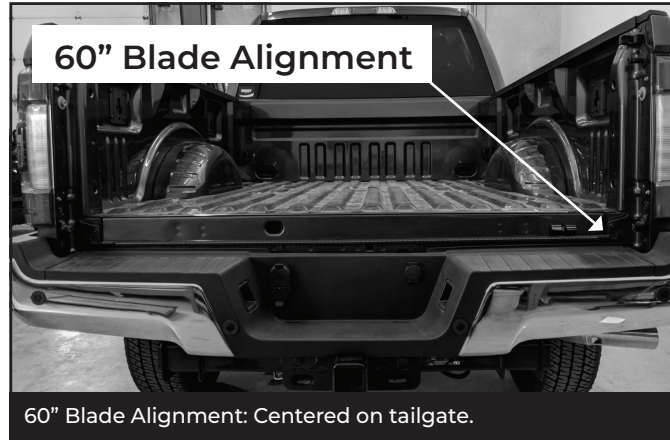

- 6** Route the wires behind the bumper. Connect 4 pin connector and Weather Pack connector to Blade Harness **Note: Putco recommends using di-electric grease on 4 pin connector to help keep connection water resistant.* Zip-tie wires and Blade driver box in safe location, away from debris, hot exhaust pipes, or pinch points.

- 7** Test that the Blade functions work properly (brake, turn signals, reverse, and running lights). Reassemble tail gate and do not forget to plug in rear view camera.



ENJOY YOUR NEW BLADE TAILGATE LIGHT BAR