

WorkBlade Light Bar Cab Mounting Kit Installation Instructions



For proper installation and best possible fit, please read all instructions BEFORE you begin.



Important Information

BEFORE you begin the installation process:

- Carefully read all instructions.
- Verify that all parts are included by checking the contents of your kit.

If any parts are missing or appear damaged, please contact our customer service team for assistance.

Customer Service

For support, please contact the Putco team, available Monday to Friday 8:30 AM to 5PM (Central Time).

1 800 247 3974

support@putco.com



Supported Lightbars

PN	93010-48	93009-48
----	----------	----------

Supported Vehicles

MAKE	MODEL	YEAR
ALL	ALL	ALL

Recommended Tools + Supplies

Clean Cloth	Isopropyl Alcohol	Diagonal Pliers
Wire Crimper	Electrical Tape	

Kit Contents

Mounting Brackets x 3	3M Tape x8	10.25" Shroud x 4
-----------------------	------------	-------------------

Lightbar Installation

1. Apply 3M tape to the back of the three black brackets. These brackets will securely hold the light bar in position, ensuring it remains safely away from the rear window.



2. Use at least 90% isopropyl alcohol to prep the surface of the lightbar. A clean, dry, warm surface is critical for adhesion.

3. Affix the black metal brackets with tape onto the notched part at the rear of the WorkBlade, ensuring even spacing. Position the brackets at each end and one in the center of the light bar for optimal stability.



4. The center of the light bar will have a subtle line running vertically, you can use this to line up the bracket. No need to measure.



5. The kit comes with four 10.25" u-channel shroud pieces. These clip onto the light bar to eliminate cab glare. They are held in place by compression. Slide the U channel towards the center so there are no gaps between each u-channel.



6. Once the brackets and u-channel are attached to the lightbar, use isopropyl alcohol to prep the surface on the vehicle rear window glass or window track where the light bar is going to be installed.


7. Peel off the red backing from all brackets to expose the adhesive. Carefully position the light bar on the chosen spot on the window or sliding rail, ensuring it is level. Avoid sticking it to the surface until you are certain of the correct placement.



8. Using 3M tape or zip ties mount the driver box behind your rear seat. Clean the surface before using tape. Do not let the driver box dangle and put extra weight on the brackets.



9. The driver box can now be wired to dash mounted switches and 12V power inside the cab. Power can be grabbed from near the cab fuse box or a cigarette outlet depending on your truck model. See table on next page for wire functions.

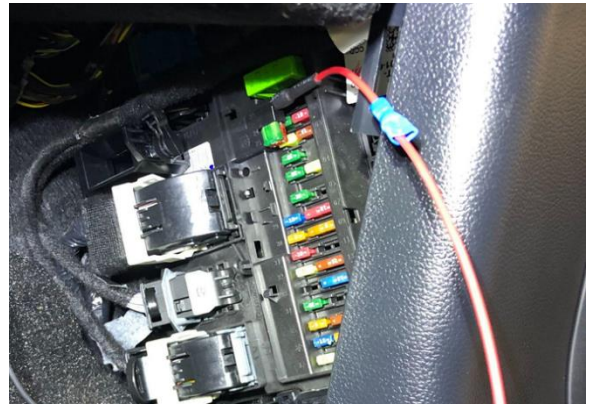

10. The workblade cab mount can also be used with the OPTIONAL wireless remote. Red= +12V, Black= Negative, Blue= Switched power (A), Orange, green and grey = Momentary switched ground (B,C,D) see wireless remote instructions for more details.



Wire Colors and Functions	
Wire	Function
Red	Auxiliary wire
Black	Ground
Orange	Switches Pattern When Grounded
Blue	+12 Volts
White	White Override

Congratulations on completing the installation of your Putco product!
 For information regarding your warranty, please visit www.putco.com/warranty.

Issues? Please Contact Our Technical Support Team: 1 800 247 3974

i **WARNING:** Final Inspection required. Inspect product was properly Installed and all installation instructions were followed.



For additional information, please visit our website at www.putco.com!